


MANUAL CONTROL SMART TOILET SEAT WITH DUAL WASHLET BIDET/HYGIENIC SPRAY

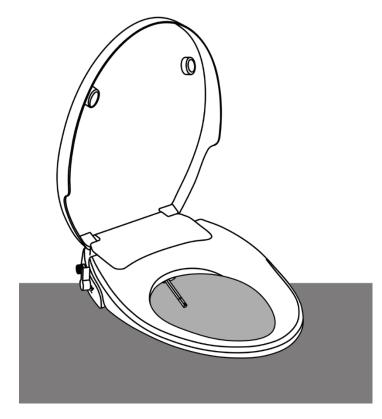


SKU:DSWWWL


Please read carefully the instruction manual before the installation...


- The water pressure should be between 0.08MPa-0.8MPa.
- Please use the parts that are provided in the package
- For installation safety, please follow this instruction manual.

 And keep the manual after the installation for future use.
- Our company will not be liable for any damages caused by any misuse or misconduct of our product.

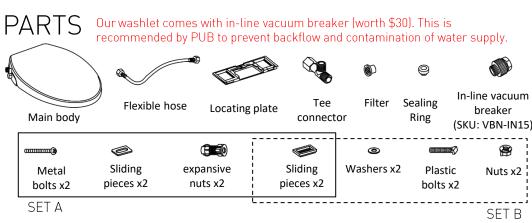


INSTALLATION

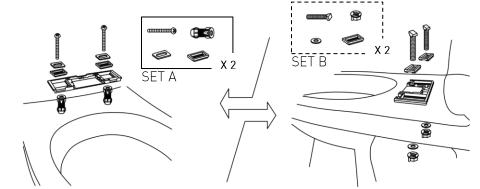

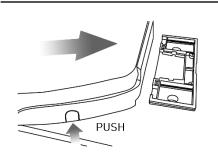




Method 2: Simple and easy to install! All you need is the NJF772 and a short flexible tube. Gives off a neater and more modern aesthetic.

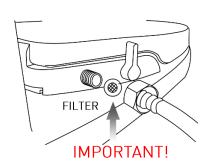

HOW TO USE



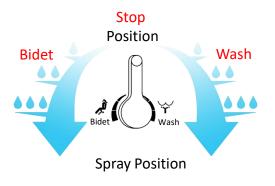

MAINTENANCE & CLEANING

Regular cleaning

Chemical product no used



Cleaning nozzle



Renewal nozzle



Cleaning/rene wal handle



SELF-DIAGNOSIS

Signs to occur	Matters to be checked	Actions to be taken
Water doesn't spray out	Check if the filter is blocked by any foreign materials.	Please clean the filter.
	Check if water feed valve is locked.	Turn on the water feed valve.
	Check if water pressure is below under 0.08Mpa?	Contractor need to adjust the water pressure.
	Check if nozzle is blocked.	Cleaning/renewal nozzle.
Water drops come out from nozzle during operation	Check if the water pressure is higher than 0.8Mpa.	If water pressure is higher than 0.8Mpa, contractor need to adjust the water pressure.
Water pressure is low during bidet cleaning used	Check if water pressure adjustment control is low	Please adjust the control using the method stated in the manual.
	Check if water pressure is below under 0.08Mpa.	Contractor need to adjust the water pressure.