


PRODUCT DRAWING

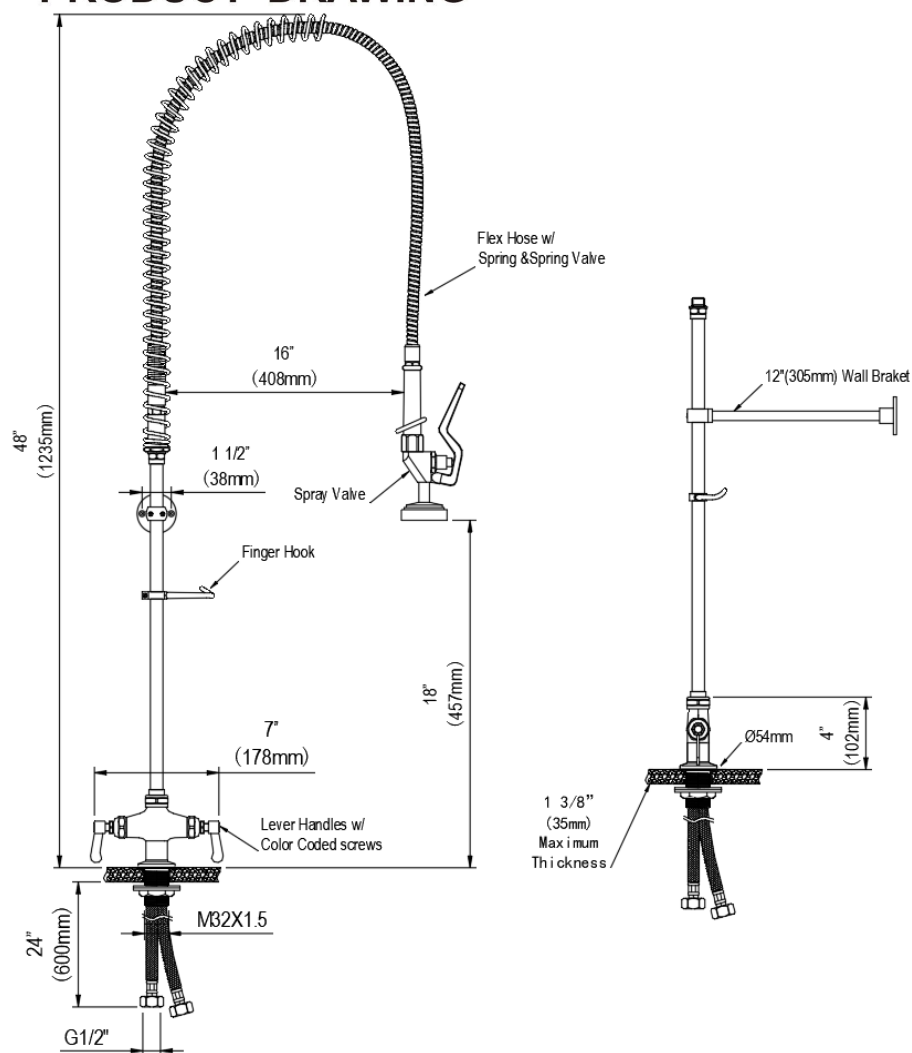

NOTE:

1. Built-in washers **A/C/D/F** are already pre-assembled before shipment. Be careful not to lose washer **A** while loosening the hose and spray valve.
2. Please keep the spare kit well in case of need in the future.
3. The threaded pipe (1/2", water inlet) is excluded. You can buy it from the local hardware store.

norika®

COMMERCIAL PRE-RINSE FAUCET



NCP5802A

PARTS LIST

NCP5802A			
No.	PART NAME	QTY	RAW MATERIAL
1	Spray Valve	1	AISI304/Brass/POM
2	Flexible Hose	1	AISI304/TPU
3	Ring	1	AISI304
4	Finger Hook	1	Zinc alloy
5	Riser Pipe	1	AISI304
6	Wall Bracket	1	AISI201
7	Main Body	1	Brass & Zinc alloy
8	Swing Nozzle	/	/
9	Add-on Faucet	/	/
10	3"Tube	/	/
11	Spare Kit	1	Metal&Plastic

ATTENTION:

Why faucet leak?



- Missing one or more washers (A/C/D/F)
- Broken or incorrect washers (A/C/D/F) inside
- Loose connections

How to do when leaking?

First of all, try to fix the connections tight where leaking.

If not work, pls disassemble the leakage position and check if washers are missing/broken/incorrect.

And then put the corresponding washer inside or replace with a new one .

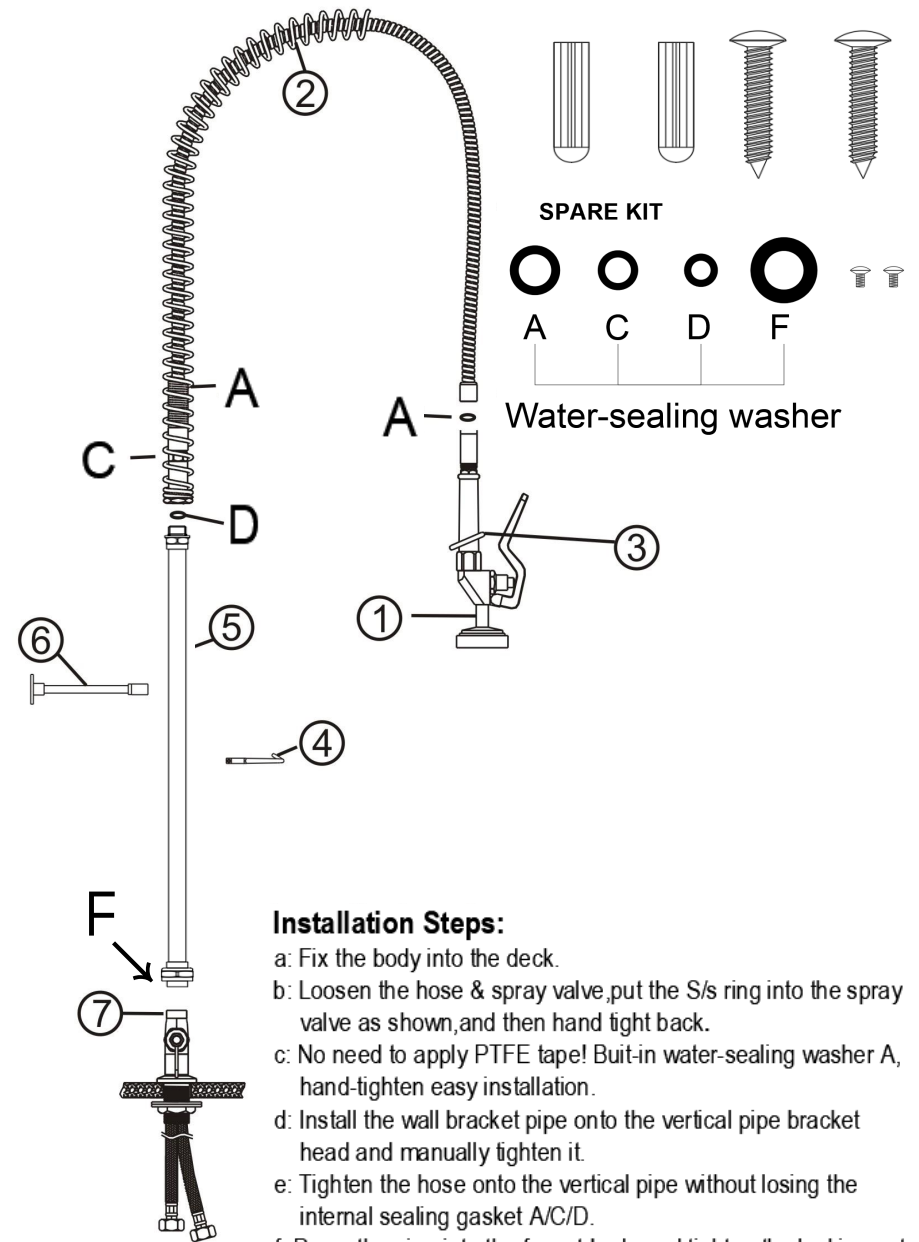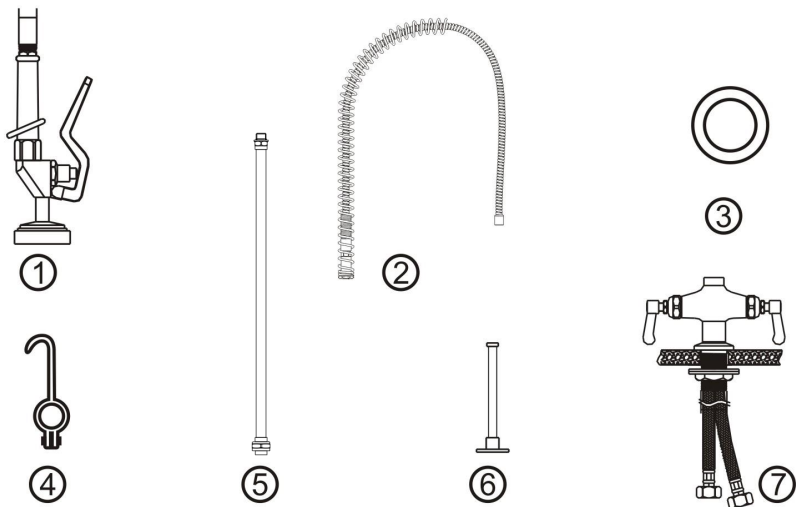


Installation Steps:

- Fix the body into the deck.
- Loosen the hose & spray valve, put the S/s ring into the spray valve as shown, and then hand tight back.
- No need to apply PTFE tape! Built-in water-sealing washer A, hand-tighten easy installation.
- Install the wall bracket pipe onto the vertical pipe bracket head and manually tighten it.
- Tighten the hose onto the vertical pipe without losing the internal sealing gasket A/C/D.
- Press the pipe into the faucet body and tighten the locking nut.
- Fix the wall bracket on the wall, and the bracket can be cut into corresponding lengths.

产品图

商用高压水槽龙头

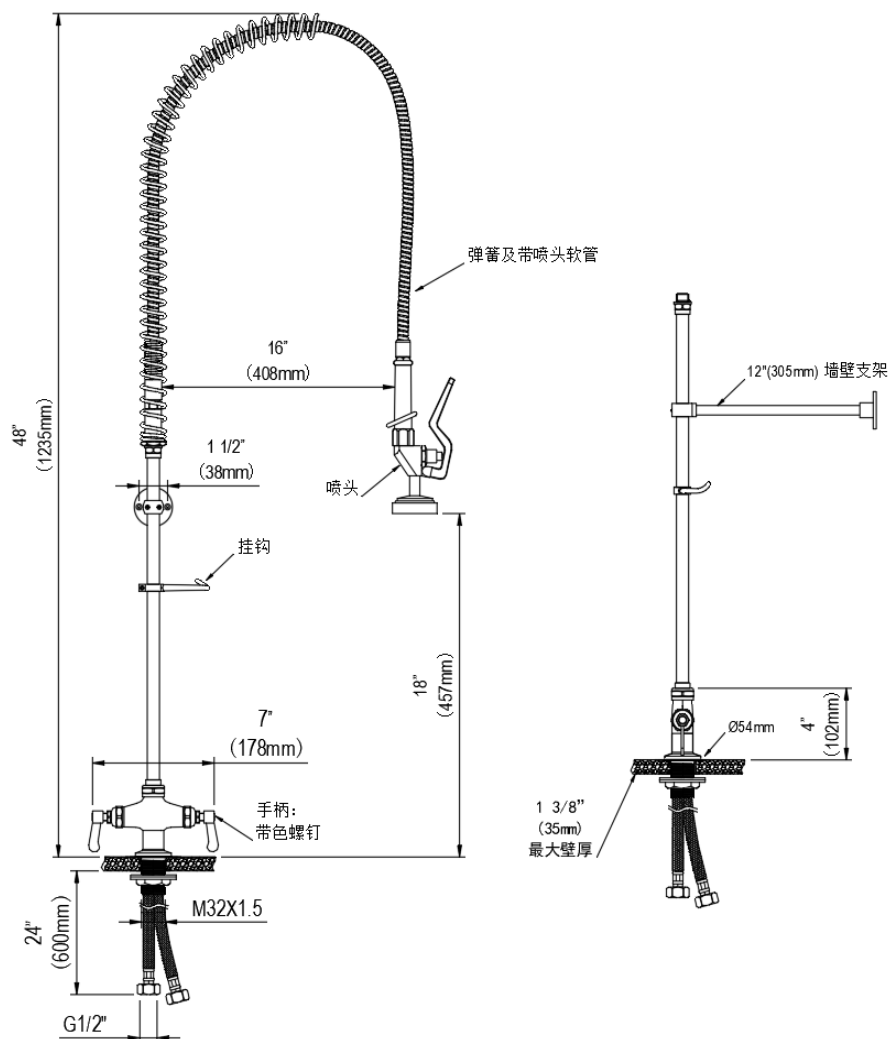

注意事项:

- 1、内置垫圈A/C/D/F已装配。拆开软管和喷头时，请注意不要丢失垫圈A。
- 2、请妥善保管备用配件，以备日后之需。
- 3、不包含1/2" 进水螺纹管，您可以另外购买。



NCP5802A

配件清单

NCP5802A			
序号	配件	数量	材质
1	喷头	1	AISI304/黄铜/POM
2	软管	1	AISI304/TPU
3	固定环	1	AISI304
4	挂钩	1	锌合金
5	竖管	1	AISI304
6	墙壁支架	1	AISI201
7	主体	1	黄铜/锌合金
8	摆动喷嘴	/	/
9	附加龙头	/	/
10	3" 管	/	/
11	备用配件	1	金属/塑料

注意：

为什么龙头漏水？

- 缺少一个或多个垫圈 (A/C/D/F)；
- 内部垫圈 (A/C/D/F) 损坏或不正确；
- 连接松动。

漏水怎么处理？

- 首先，尝试在漏水处拧紧各部件。
- 如果不起作用，请拆下泄漏部位，检查垫圈是否丢失，损坏或不正确。
- 然后放入相应的垫圈或更换新垫圈。

